




Chrysler Throttle Extension Lever P/N 20-7

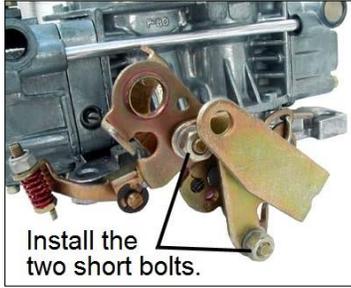

Install the two short bolts.

Holley



Install short bolt on top and long bolt and spacer on bottom.

Street Demon

Printed in U.S.A.
Revision Date: 6-2-15


Holley Performance Products

Tech Service: 1-270-781-9741

Copyright © 2000
199R10167-1



Chrysler Throttle Extension Lever P/N 20-7

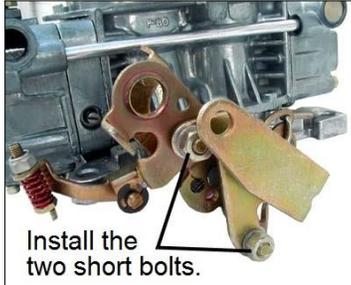

Install the two short bolts.

Holley



Install short bolt on top and long bolt and spacer on bottom.

Street Demon

Printed in U.S.A.
Revision Date: 6-2-15


Holley Performance Products

Tech Service: 1-270-781-9741

Copyright © 2000
199R10167-1




Chrysler Throttle Extension Lever P/N 20-7

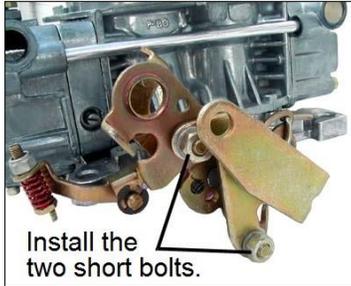

Install the two short bolts.

Holley

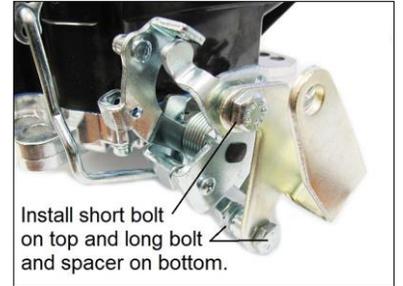

Install short bolt on top and long bolt and spacer on bottom.

Street Demon

Printed in U.S.A.
Revision Date: 6-2-15


Holley Performance Products

Tech Service: 1-270-781-9741

Copyright © 2000
199R10167-1



Chrysler Throttle Extension Lever P/N 20-7

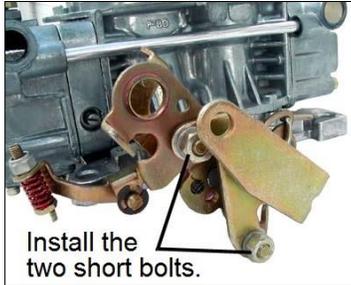

Install the two short bolts.

Holley



Install short bolt on top and long bolt and spacer on bottom.

Street Demon

Printed in U.S.A.
Revision Date: 6-2-15

Holley Performance Products

Tech Service: 1-270-781-9741

Copyright © 2000
199R10167-1