

MSD INSTALLATION INSTRUCTIONS

Billet Hold Down Clamp, Ford PN 8010MSD

ONLINE PRODUCT REGISTRATION: Register your MSD product online. Registering your product will help if there is ever a warranty issue with your product and helps the MSD R&D team create new products that you ask for! Go to www.msperformance.com/registration.

Parts Included

- 1 - Billet Clamp
- 1 - 5/16" - 18 x 1.75" set screw
- 1 - 5/16" - 18 nut
- 1 - 5/16" Lock Washer
- 1 - 5/16" Flat Washer

INSTALLATION

1. Install the set screw into the block using a 5/32" Allen wrench.
2. Install the Billet Clamp, flat washer, lock washer and the nut on the set screw.
3. With the housing in the correct timing position, tighten the nut. Figure 1 shows the correct installation of the clamp. If the clamp is excessively angled and the end points of the clamp do not properly seat, the clamp will not tighten properly.

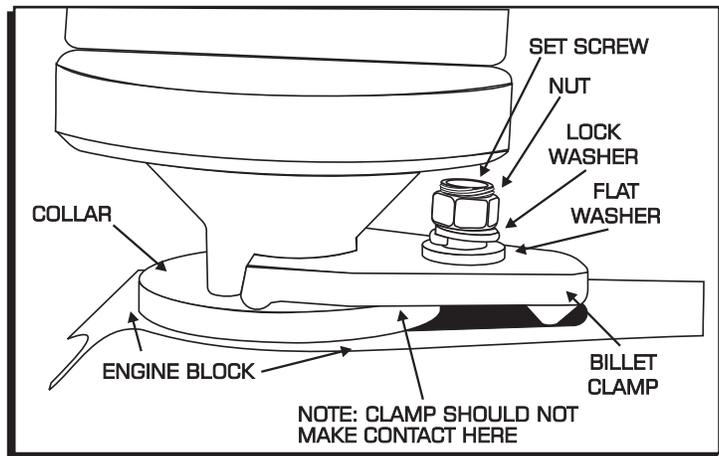


Figure 1 Billet Hold Down Clamp Installation.

