

DESCRIPTION	COLOR	WIRE GAUGE	J4 PIN
OUTPUT 30	RED	20 ga	B1
OUTPUT 29	PINK	20 ga	B2
OUTPUT 36	WHITE	20 ga	B3
OUTPUT 35	BLACK/RED	18 ga	B4
OUTPUT 32	BLANK		B5
OUTPUT 34	BLANK		B6
OUTPUT 28	BLANK		B7
INPUT 46	BLANK		B8
INPUT 45	BLANK		B9
INPUT 47	GREY	20 ga	B10
OUTPUT 31	BLANK		B11
OUTPUT 33	YELLOW	20 ga	B12
OUTPUT 27	LIGHT BLUE	20 ga	B13
SENSOR GROUND	LIGHT GREEN	20 ga	B14
INPUT 42	BLANK		B15
INPUT 48	BROWN/WHITE	20 ga	B16
INPUT 37	ORANGE	20 ga	B17
INPUT 39	GREY	20 ga	B18
INPUT 40	BLANK		B19
SENSOR +5V	ORANGE/YELLOW	20 ga	B20
INPUT 41	RED/GREEN	20 ga	B21
INPUT 43	TAN	20 ga	B22
INPUT 44	BLUE	20 ga	B23
INPUT 49	BLANK		B24
INPUT 38	BROWN	20 ga	B25
INPUT 50	RED	20 ga	B26


LOOSE LEADS FROM ECU CONN. J4	DESCRIPTION	PIN
	BRAKE SWITCH	B16
	OD TOGGLE	B22
	OD STATUS LED	B13

ECU PIN	DESCRIPTION	TRANS CONNECTOR	SPLICE
		1	
B14	SENSOR GROUND	2	
B12	TCC SOLENOID	3	
B4	SWITCHED +12V	4	
B17	ATF TEMP	5	
B3	EPC/LINE PRESSURE	6	
B1	SHIFT SOL A	7	
B2	SHIFT SOL B	8	
		9	
		10	

ECU PIN	DESCRIPTION	TRANS CONNECTOR	VSS
B14	SENSOR GROUND	2	
B18	SENSOR SIGNAL	1	



ECU PIN	DESCRIPTION	TRANS CONNECTOR	LINE PRESSURE TRANSDUCER
B20	SENSOR +5V	B	
B14	SENSOR GROUND	A	
B21	SENSOR SIGNAL	C	

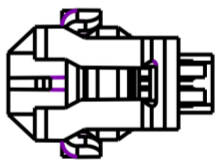

ECU PIN	DESCRIPTION	COLOR	AWG	TRANS CONNECTOR	DIGITAL TRANS RANGE CONNECTOR
	PLUG			1	
B14	GROUND			2	
B25	GEARSeI TR3A			3	
B10	GEARSeI TR 1			4	
B23	GEARSeI TR 2			5	
B26	GEARSeI TR 4			6	
LOOSE	4X4 MODULE	BLACK/W	18	7	
LOOSE	4X4 MODULE	BLACK/W	18	8	
LOOSE	REVERSE LAMP +12V IN	VIOLET	18	9	
LOOSE	STARTER CTRL +12V IN	WHITE	16	10	
LOOSE	REVERSE LAMP +12V OUT	VIOLET	18	11	
LOOSE	STARTER CTRL +12V OUT	WHITE	16	12	

